

L 63 B-S-W



Dishwasher

Care and Use Manual



Lave-vaisselle

Guide d'utilisation et d'entretien



Lavavajillas

Manual de uso y cuidado

Quick guide to your dishwasher

This manual explains easily what your new dishwasher has to offer. In addition, you will discover a world of useful hints and handy tips to help you get a better wash from your dishwasher and to make it last longer.

1. Introduction (p.2)

Find important safety instructions to best utilize your valuable purchase.

2. Control panel at a glance (p.3)

Learn to get to know the parts which make up your dishwasher. This is where you will find the description of the controls and the internal parts.

3. How to load your dishes (p.4)

This page includes useful tips to help you load your dishwasher correctly and make the most of all the available space.

4. How to start your dishwasher (p.5)

After loading the dishes, you need to select the right wash cycle and measure out the correct dose of detergent and rinse aid. Reading these pages will help you through all the wash phases.

5. Detergent and rinse aid (p.6)

Learn the right usage of detergent and rinse aid for best washing results.

6. Washing cycles (p.7)

Select the right wash cycle for your dishes. Selecting the most suitable wash cycle for the load ensures clean dishes and a more convenient use of water and electricity.

7. Salt: a helpful extra (p.8)

Using salt can improve the performance of your dishwasher. Learn more about its potential.

8. Troubleshooting (p.8)

Before calling customer care, have a look here: a lot of problems can have an immediate solution. If you can't manage to solve it yourself, then call the Ariston customer care line and any problem will be solved as quickly as possible.



9. Washing special items (p.9)

Before washing anything in the dishwasher check the information provided by this section.

10. Special care and maintenance (p.10)

Once in a while, once a month, spend a little time on the filter assembly and the sprayer arms. This is where you can learn how.

11. Keeping your dishwasher in shape (p.10)

Respect the few rules you will find here, and the result will be a better performing dishwasher.

12. Technical characteristics (p. 3)

All your appliance's technical data, in accordance with norms and regulations.

13. Warranty (p.11)

Ariston supports its products by means of after-sales services and assistance, offering you special warrantees, professional assistance as well as quality spare parts and accessories. To find out more, call the Ariston Customer care line.

Introduction

Congratulations on the purchase of your new Dishwasher. Please spend a few moments reading the User Manual. This will show you ways to best utilize your valuable purchase.

⇒ Read through this guide before using your new dishwasher

⇒ Read and obey all safety messages.

⇒ For Your Records
Write model and serial numbers here.
You can find them on the front of the machine and inside of the door opening.

Model #:

Serial #:

Important Safety Instructions

Your safety and that of your children



WARNING -When using your dishwasher follow basic precautions including the following:

- ➔ Read all instructions before using your new dishwasher. Ariston dishwashers are providing two manuals: one Installation Instruction manual and one Care and Use manual. Read them carefully and save them for future references.
- ➔ Use the dishwasher only for household use and for its intended function.
- ➔ Use only detergents or wetting agents recommended for use in a dishwasher and keep them out of the reach of children.
- ➔ When loading items to be washed:
 - a) locate sharp items so that they are not likely to damage the door seal; and
 - b) load sharp knives with the handles up to reduce the risk of cut-type injuries.
- ➔ Do not wash plastic items unless they are marked "dishwasher safe" or the equivalent. For plastic items not so marked check the manufacturer's recommendations.
- ➔ Do not operate your dishwasher unless all enclosure panels are properly in place.
- ➔ Do not tamper with controls.
- ➔ Do not abuse, sit on, or stand on the door or dish rack of the dishwasher.
- ➔ The door should not be left open as it may create a dangerous obstacle.
- ➔ Do not allow children to play in or on the dishwasher to avoid risk of injury.
- ➔ Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. **HYDROGEN GAS IS EXPLOSIVE.** If the hot water system has not been used for such a period, before using the dishwasher turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- ➔ Remove the door to the washing compartment when removing an old dishwasher from service or discarding it.
- ➔ Dishwashers must be electrically grounded. Read the Installation Instructions for details.
- ➔ Do not run the dishwasher while you are out of home.
- ➔ A qualified technician should do all repair work.
- ➔ Do not touch the heating element during or immediately after use


Save these instructions

Let's open up your dishwasher together

How is it made?


Get to know the parts which make up your dishwasher.

- E. Upper rack
- F. Top spray arm
- G. Rack height adjuster
- H. Lower rack
- I. Bottom spray arm
- J. Salt container cap
- K. 4 piece filter
- L. Detergent and rinse aid dispenser

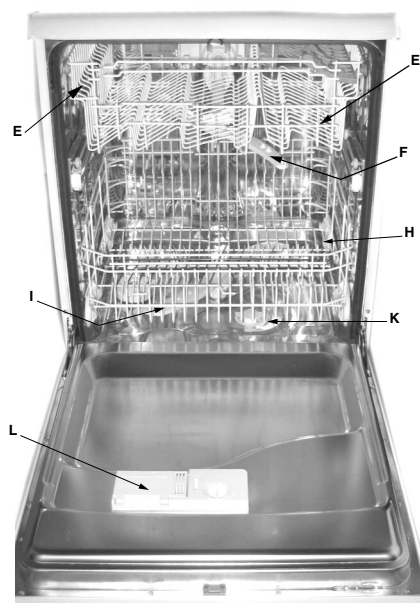

Control panel at a glance


- A. **ON-OFF Button**
Press this button to turn the appliance on.
- B. **ON-OFF Indicator light**
Indicates that the appliance is turned on.
- D. **Cycle selection knob**
Use this knob to select a wash cycle.
- G. **Cycle phase indicator lights**
pre-wash, wash, rinses, drying.
- S. **Low salt indicator light**
This light warns you that it is time to add more salt.

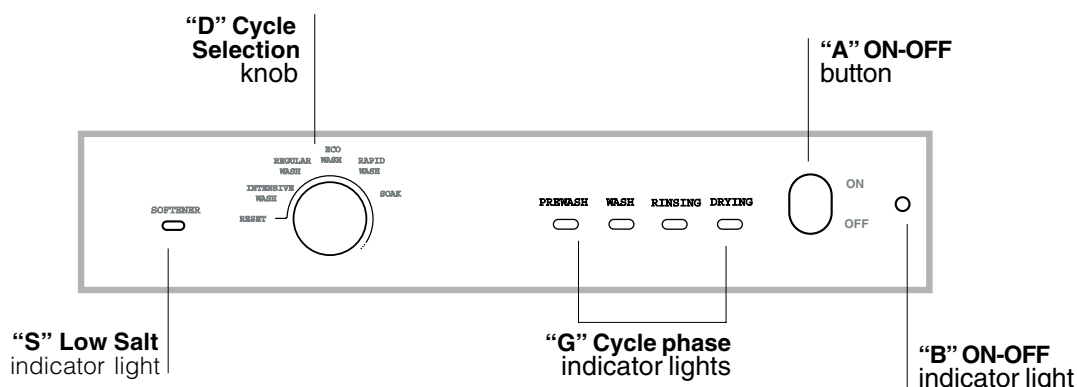

Technical Characteristics

Technical characteristics	
Width	inches 23,62 -24* (60 cm.)
Depth	inches 23,62 (60 cm.)
Height	inches 32 1/4-34 1/2 (82-87,5 cm.)
Capacity	12 standard place settings
Mains water pressure	4,3 psi-145 psi 0,03÷1MPa (0,3 ÷10 bar)
Power voltage	See data plate
Total absorber power	See data plate
Fuse	See data plate
* with the pre-installed filler strips	

This dishwasher conforms to the following Standards for U.S.A and Canada:

- UL 749 
- ANSI/AHAM DW-1-1992

How to load your dishes

Before washing, a few small steps can help you get a better wash and keep your dishwasher performing to its best. Remove the largest scraps of food left over on your plates, soak saucepans and frying pans with tough baked on food. After loading your dishes, make sure the blades on the sprayer arm turn well. Do not place glasses and cups on top of one another, and make sure the dishes are not touching.

First.

Before placing the dishes in the racks, remove the largest scraps of food left over on your plates, you will thus avoid blocking the filter, which would reduce the efficiency of the wash. If the saucepans and frying pans are very dirty, allow them to soak before being washed. To make it easier to load your dishes, pull the racks out.

What goes into the lower rack?

We recommend you place the most difficult dishes to wash into the lower rack: saucepans, lids, soup bowls and plates (a load example is shown in the photo).

- **Serving dishes and large lids:** place them on the sides of the rack.
- **Saucepans, salad bowls:** must always be placed upside down
- **Very deep dishes:** place them obliquely, thus allowing water to run down them and cleaning them better

The cutlery basket can be split up by pulling out the handle.

When you only have little cutlery to wash, you can use just half the basket; save space for other crockery or place the other half of the basket in the upper rack instead (see figures A and B).

This basket is equipped with two removable grids: insert the cutlery one by one into the slots.



Warning:

Knives and other utensils with sharp edges must be placed in the cutlery basket with the points facing downwards, or they must be positioned horizontally in the tip-up compartments on the upper rack.

Position all cutlery items so that they don't touch.

What goes into the upper rack?


Place delicate and lightweight dishes in the upper rack: glasses, tea cups and coffee cups, saucers - but plates too - shallow salad bowls, slightly dirty frying pans and shallow pans (the photo illustrates a few examples).

Position lightweight dishes in such a way as to avoid their being moved by the spray of water.

After loading the dishes, remember to check that the blades on the sprayer arms can turn freely without knocking against any dishes.

How to adjust the top rack.

The upper rack can be set in high or low position to enable you to organize your dishes effortlessly.

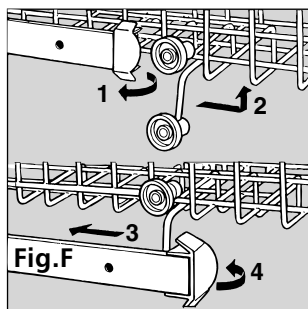


Open the rail stop flaps and pull the rack out completely. Now place it in high or low position, then slide it along the guide rails until the front wheels also go in. Now close the rail stop flaps. Follow the sequence of actions illustrated in figure "F".







How to use our racks

lower rack

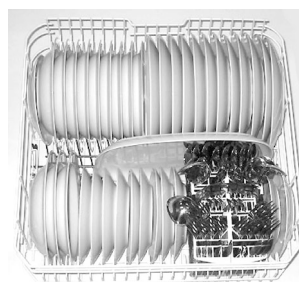

upper rack

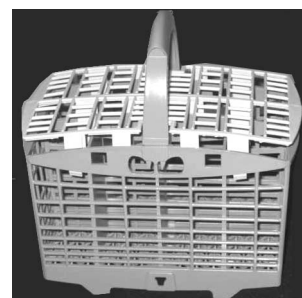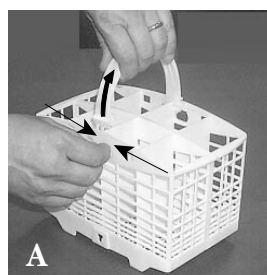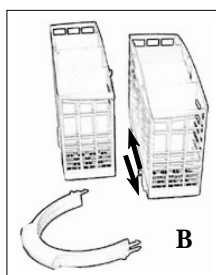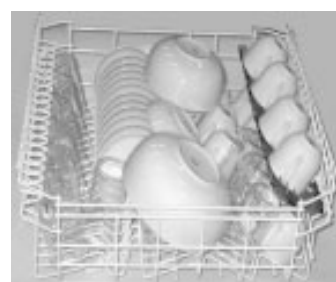

Starting the dishwasher

Ready, steady, go!

You have loaded your dishes and you now have to set the wash cycle. It takes just one minute to learn how

After performing all the operations described in the previous paragraphs press on-off button "A": indicator light "B" comes on.

Selecting the wash cycle.

To select the wash cycle, turn knob "D" clockwise until the reference notch on the knob corresponds with the number or symbol for the cycle you wish to set (have a look at the wash cycle table on page 7).

After a few seconds, you will hear a short beep: the wash cycle has begun and we do not recommend you change it.

The dishwasher keeps you informed.

Your dishwasher is fitted with indicator lights (G) which light up to indicate the cycle phase under way. prewash, wash, rinsing, drying.

At all times, your dishwasher tells you which cycle phase is under way.

Modifying a wash cycle in progress.

If you have chosen the wrong cycle, not to worry! You can modify the wash cycle in progress, if it has only just started. Turn the knob counter clockwise until it reaches the Reset position and, after a few seconds, you will hear 4 beeps and indicator light "G" will turn off. This is to inform you that all the settings have been cancelled. You are now free to re-set the correct wash cycle.

You've left out a dish?

Well, it happens to everyone. Interrupt the wash cycle by pressing the ON-OFF button, insert the dish you had forgotten and press the ON-OFF button again. The cycle will start up from where you interrupted it.

Finished?

The end of the wash cycle is indicated by two short beeps and the flashing of the drying phase indicator light.



Warning:

Turn the knob counter clockwise to Reset in order to reset all the settings. Press the ON-OFF button as well, thus cutting off the electricity supply to the appliance., unplug the appliance from the electricity socket to cut off the power supply; the power supply cable should consequently be easily accessible.



If accessible turn off the water tap.

Wait a few minutes before unloading the dishes: they are very hot! If you wait a little while, they dry better thanks to the steam.

Empty the lower rack first.

There's been a power failure? Have you opened the dishwasher door?

The wash cycle stops and then restarts when the electricity comes back on or when you shut the door. Everything is under control!



If opening the door soon after the end of the program, or during it, stand away from the Dishwasher, to avoid possible injury from hot steam.

You can cancel the wash cycle in progress, if it has only just started.

Make sure the wash cycle has ended before removing the dishes!

Detergent and rinse aid

Only use specific dishwasher detergents. Pour the detergent into the dispenser on the inside of the door. Before the wash cycle starts!

The detergent

Loading the detergent


To open lid A, press button B. The detergent should be poured into the two containers C and D up to the rim.

Now you can close the lid: press it down until you hear it click.

If you prefer to use the detergent in tablets, place one of these in container "D". Now you can close the lid: press it down until you hear it click.

It won't close!

Check whether there is any detergent residue on the edges of the dispenser. It is due to this residue that the lid won't close. Get rid of it and you'll see that it closes.

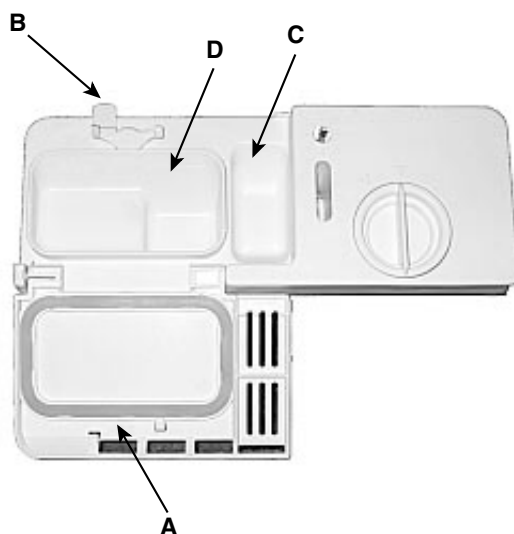

WARNING!

Detergent is corrosive!

Take care to keep it out of reach of children

- Using too much detergent does not provide a better wash or cleaner dishes. Use only a proportional amount to the size of the wash.


- Keep your dishwasher detergent and rinse aid in a cool and dry place.

Rinse aid.

Rinse Aid makes dishes sparkle and improves the drying. The rinse aid container is situated on the inside of the appliance door; you should refill it when you see the container is empty by means of indicator eye "D".

Loading the rinse aid.

To open the dispenser, turn cap C counter clockwise. Take care when you pour in the rinse aid to avoid it overflowing. You can adjust the amount of rinse aid used by the dishwasher: regulate the adjuster F which you will find under lid C.

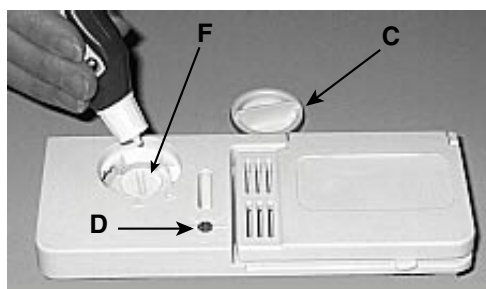

You can choose from six different positions. It is normally set to 4.

Proper dosage of the rinse aid improves drying.

If drops of water remain on the dishes or spotting occurs, turn the dosage adjuster to a higher setting.

If, on the other hand, the dishes have white streaks, then turn the dosage adjuster down to a lower setting.

Select the right wash cycle

A wash cycle for every degree of soil

Dishwasher washing guarantees your dishes will be cleaned in a sanitized setting for safer, cleaner results.

Salt, rinse aid, the right amount of detergent and the correct wash cycle: this is the formula to get the best results and to keep your dishwasher in shape

To optimise consumption levels, try to use the dishwasher with a full load only. If it takes some time to fill up your dishwasher, use the soak cycle to avoid the formation of bad odours and caked-on food.

The number and type of wash cycles varies according to the model of dishwasher.

Select the right wash cycle for your dishes. Selecting the most suitable wash cycle for the load ensures clean dishes and a more convenient use of water and electricity.

Cycle	Cycle selection instructions	Cycle description	Detergent for pre-wash + wash	Rinse Aid	Wash cycle duration (tolerance $\pm 10\%$ without extra drying) Hrs. Min.
Intensive Wash	Very dirty dishes and pans (not to be used for delicate items)	Pre-wash with hot water at 95°F Wash at 140°F 2 cold rinses Hot rinse at 149°F Drying	0.35 + 1.6oz. (10+45 g)	*	2:05'
Regular Wash	Cycle for normally dirty pans and dishes. Standard daily cycle.	Wash at 122°F Cold rinse Hot rinse at 153°F Drying	1.7oz. (50 g)	*	1:40'
Eco Wash	Environmentally-friendly cycle, with low energy consumption levels, suitable for normally dirty pans and dishes.	2 Cold pre-washes Extended wash at 113°F Hot rinse at 149°F Drying	0.35 + 1.6oz. (10+45 g)	*	2:40'
Rapid Wash	Economic and fast cycle to be used for slightly dirty dishes. Run cycle immediately after use. Without drying.	Short wash at 113°F Hot rinse at 122°F	1.6 oz. (45 g)		0:30'
Soak	Rinsing cycle used while awaiting more dishes to be loaded from the next meal.	Short cold wash to prevent food from drying onto the dishes			0:12'

Never without salt Water in your home

Water hardness varies according to where you live. If the water in your home is hard you have the possibility to add salt in order to soften your water. The softer the water the better will be your washing and drying results.

Loading the salt.

You can use special water softening salt or normal rock salt.

The salt container is situated underneath the lower rack, fill it up as follows:

1. Pull out the lower rack completely, unscrew and remove the container cap.
2. Is it the first time you load the salt? First fill the container up with water (you won't have to do this again next time)
3. Put the dishwasher funnel on the hole and pour in approximately 70 oz. of salt. It is normal that some water comes out of the container.



4. Screw the cap back in place carefully.

When should I load the salt?

The salt container must be filled when the softener indicator light "S".

Once you have loaded the salt for the first time, it is normal that the low salt indicator light stays on or flashes for 5 consecutive cycles.

Intelligent salt.

Your dishwasher can adjust its salt consumption according to the hardness of the water in your home. This way, you can optimise and customise your dishwasher's salt consumption (not too much, nor too little).


To adjust salt consumption, do as follows:

1. Unscrew the salt container cap
2. There is an arrow on the neck of the container (see figure): if necessary, turn the arrow anti-clockwise

Water Hardness			Selector position	Salt consumption (Oz/cycle)	Autonomy (cycles\ 70oz.)
Clarke degrees	°fH	mmol/l			
0 - 14	0 - 17	0 - 1,7	/	0	/
14 - 36	18 - 44	1,8 - 4,4	"-"	0.7	60
36 - 71	45 - 89	4,5 - 8,9	MED	1.4	40
>71	> 89	> 8,9	"+"	2.1	25

from the "-" setting to the "+" setting.

Select the arrow position depending on the water hardness, referring to the table provided.

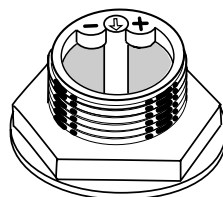

If you don't know your water hardness ask your local water supplier.

NOTE: if you don't find special water softening salt you can also use normal rock salt.

Troubleshooting

If you have a problem, read this

Your dishwasher may not work or not function properly. In many cases, these are problems which can be solved without having to call for a technician. Before calling the Customer Care Center, always check the points below.

The dishwasher won't start

- Is the water supply tap turned on?
- Is the water supply tap connected to the hose properly?
- Has the water in your home been cut off?
- Is the pressure of the water supply sufficient?
- Is the hose bent?
- Is the filter on the water supply hose blocked?
- Is the dishwasher door open?

The dishes are not clean.

- Have you put the right amount of detergent into the dispenser?
- Is the wash cycle suitable for the dishes you have placed inside the appliance?
- Are the filter and microfilter clean?

- Can the sprayer arms turn freely?

The dishwasher won't drain.

- Is the drain hose bent?
- ### Limescale deposits or a white film form on the dishes.

- Is the lid on the salt container closed properly?
- Is the rinse aid dosage correct?

Error messages.

Your dishwasher is equipped with a safety system which is able to detect any operating problems. These anomalies are reported by one or two wash cycle indicator lights "G" will flash rapidly. Take a note of which lights are flashing, turn the appliance off and call for technical assistance.

Tap off alarm

If you have forgotten to turn the water tap on, your appliance will

remind you of this by sounding a few short beeps for a few minutes. Turn the tap on and your appliance will start up again after a few minutes. If you were not home when these beeps are sounded, the appliance will be blocked automatically the 2nd and 3rd light from the right will flash rapidly. Turn the appliance off at the ON-OFF button, turn on the water tap and wait approximately 20 seconds before turning the appliance back on; the selected wash cycle will start up again.

Clogged filter alarm

If the appliance is blocked and the 2nd and the 4th light from the right flash rapidly, this means the filter is clogged by large particles of food residue. Turn the appliance off, clean the filter thoroughly and reposition it in its seat as illustrated on page 10. Then turn it back on. The selected wash cycle will start up again.

Water load solenoid valve malfunction alarm.

If the 3rd light from the right flashes rapidly, turn the dishwasher off and back on again after one minute. If the alarm persists, first turn off the water tap to avoid any flooding and then cut off the electricity supply and call for technical assistance.

You have checked everything, but the dishwasher still doesn't work and the problem persists?

Call the Ariston Customer Care (1-888-426-0825) and remember to mention:

- the type of malfunction
- the model mark (Mod....) and the serial number (S/N....) indicated on the rating plate located on the inner door, to one side.

Washing special items

If you have any doubts about washing particular items check with the manufacturer to see if they are dishwasher safe.

Material	Dishwasher safe	Comments
Aluminium	Yes, with caution	Anodized Aluminium may fade or darken by high water temperatures and detergents.
Bottles and Cans	No	Labels could loosen and clog the spray arms or pump and reduce washing performance.
Cast Iron	No	Seasoning will be removed and the iron will rust.
China / Stoneware	Yes, with caution	Always check manufacturer's recommendations before washing. Antiques and hand painted china with a pattern on top or with gold leaf decoration may fade.
Copper	Yes, with caution	Do not wash copper in the same load as silver or silver plate because the silver items could discolor.
Crystal	No	Certain types of lead crystal may etch if machine washed. Check with the manufacturer's recommendations.
	Yes	Wash with special program at low temperature. Make sure crystal dishware is loaded securely and will not fall over or knock against other dishwasher while being washed.
Disposable Plastics	No	Cannot withstand machine washing.
Glass	Yes	Exception: Milk glass may yellow.
Iron	No	Iron will rust.
Knives	No	Wood handles may warp, crack, or loosen. Plastic handles may discolor. Check manufacturer's washing instructions.
Non-dishware items	No	Use ONLY standard household dishware. Never wash items such as electronic air cleaners, air filters of any kind, paint brushes, etc.
Non-stick coatings	Yes	If marked dishwasher safe. After washing apply a light coating of vegetable oil to maintain non-stick quality.
Stainless Steel, Silver and Silver Plates	Yes, with caution	Exceptions: Old silverware and silverware decorated with an oxidising agent. Hot water can loosen the handles on old silverware and wear off the decorations on the other. Never let silverware come into contact with other metals: you will thus avoid stains and blackening. Silver plates and serving dishes should be washed immediately after use, specially if they have contained salt, eggs, olives, mustard, vinegar, fruit juices and cooked vegetables.
Pewter, Brass, Bronze	No	Pewter will tarnish.
Tin	No	Tin will rust.
Wood	No	Unless marked dishwasher safe by the manufacturer. Wood can warp, crack or lose shape with any kind of washing.

Care and maintenance


Cleaning and special maintenance

Filter assembly

If you want consistent good results from your dishwasher, you need to clean the filter assembly.

Food particles are removed from the wash water, when the water is recirculated during the cycle filtering the water 100%. For this reason, it is a good idea to remove the larger food particles trapped inside the cup "C" and the semi-circular filter A after each wash; pull the cup handle upwards to remove them. Just rinse them under running water.

The entire filter assembly should be cleaned thoroughly once a month:

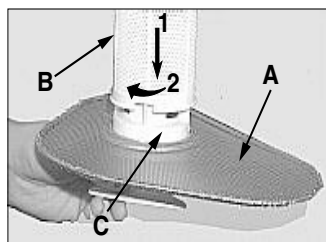

cup C + semi-circular filter A + cylindrical filter B. Rotate filter "B" anticlockwise to remove it.

For cleaning, use a non metallic brush.

Reassemble the filter parts (as shown in the figure) and reinsert the whole assembly into the dishwasher. Position it into its housing and press downwards.



Never use the dishwasher without the filter in place.

Improper replacement of the filters may reduce the efficiency of the wash and even damage your dishwasher.

Once in a while, once a month, spend a little time on the filter assembly and the sprayer arms.



Cleaning the sprayer arms.

Food residue may become encrusted onto the sprayer arms and block the holes where water comes out. Check the sprayer arms regularly and clean them once in a while (letters F and I "How is it made?").

Keep your dishwasher in shape

Respecting these few rules ensures you will always have a reliable work companion by your side.

After every wash.

When the wash cycle has ended, always remember to leave the appliance door ajar. This way, moisture and bad odours will not be trapped inside.

Unplug the appliance.

Before carrying out any cleaning or maintenance on the dishwasher, always remove the plug from the electricity socket. Do not run risks.

No solvents! No abrasives!

To clean the exterior and rubber parts of your appliance, do not use solvents or abrasive cleaning products. Use a cloth dampened with lukewarm soapy water only. If there are any stains on the surface of the appliance interior, use a cloth dampened with water and a little white vinegar, or a cleaning product specifically made for dishwashers.

Going on holiday?

When you go away for an extended period of time, we recommend you do the following:

- run a cycle with the dishwasher empty
- turn off the water inlet tap.
- leave the appliance door ajar

This will help the seals last longer and prevent unpleasant odours from forming inside the appliance.

Moving the appliance.

Should the appliance have to be moved, try to keep it in a vertical position. If absolutely necessary, it can be positioned on its back.

The seals.

One of the factors that cause unpleasant odours to form inside the dishwasher is food that remains trapped in the seals. Periodic cleaning using a damp sponge will prevent this from occurring.



Do not worry about removing every single bit of food residue from your dishes, but do get rid of bones, peel and rind and any other left-overs before placing them in the racks. Empty out all glasses and cups.

Statement of Warranties

Ariston Dishwasher

The warranties provided by (Ariston) in this statement of warranties apply only to Ariston Dishwashers sold to the first using purchaser by Ariston or its authorized distributors, dealers, retailers or service centers in the United States or Canada. The Warranties provided herein are not transferable.

Length of Warranty

2 Years Full Limited Warranty from the date of installation*

Ariston will repair or replace, free of charge, any component part that proves defective in conditions of normal home use. Shipping and labor costs included. Warranty repair service must be performed by an authorized Ariston Service Center.

3rd Year Limited Warranty on racks from the date of installation*

Ariston will replace your racks, free of charge, with the same rack or a current rack that is equivalent or better in functionality if the racks should rust under conditions of normal home use (excluding any rack accessories), shipping charges excluded.

3rd-5th Year Limited Warranty on Electronics from the date of installation*

Ariston will repair or replace free of charge, any microprocessor or circuit board that proves defective under conditions of normal home use 3rd year through 5th year from the date of original installation, labor charges excluded.

3rd-5th Year Limited Warranty on main motor from the date of installation*

Ariston will repair or replace free of charge, circulation motor or component part of that motor that proves defective under conditions of normal home use, 3rd year through 5th year, from the date of original installation, labor charges excluded.

Lifetime Limited Warranty against Stainless Steel Rust Through from the date of installation*

Ariston will replace your Dishwasher, free of charge, with the same model or a current model that is equivalent or better in functionality if the dishwasher tub should rust through under conditions of normal home use, labor, shipping, and installation charges excluded. In the event the door should rust it will be replaced labor, shipping and installation charges excluded.

10 day warranty after purchase on cosmetic damages.

Ariston will replace any cosmetic parts, free of charge – including service call, which are found and reported damaged within 10 days after purchase. Any damages caused by improper handling, shipping, or installation will not be covered under this clause.

* Date of installation shall refer to the earlier of the date the Dishwasher is installed or ten business days after delivery date.

Exclusions:

This warranty does not cover repair or service calls to correct the installation, to provide instructions on the use of your product, to replace house fuses or correct plumbing or the electric wiring in your home. In addition any repair to the products that's use was in a manner other than what is normal for home use is void of any warranty claim. The warranties exclude any defects or damage arising from accident, alteration, misuse, abuse, improper installation, unauthorized service work, or external forces beyond Ariston control, such as fire, flood, and other acts of God, or installation not in accordance with local electric or plumbing codes. Labor, shipping, and installation charges incurred in the repair or replacement of any product after a period of one year from the date of installation shall not be covered by this warranty. Any and all replaced or repaired parts shall assume the identity of the original for the purposes of the applicable warranty period. To the extent permitted by law, this warranty is in lieu of all other express and implied warranties, including the implied warranties of merchantability and fitness for a particular purpose. Ariston does not assume any responsibility for incidental or consequential damages.

To obtain warranty services call 1-888-426-0825, or write to:

Ultra 8 International, 2505 Anthem Village Drive, Suite E – Box 562, Henderson Nevada 89052

Be sure to provide; model number, serial number, purchase date, and the sellers name and address.